



## How to use AFUWINGUIP Flash Utility?

1. Download BIOS package for your motherboard.
  - (1) Please log in ECS website <http://www.ecs.com.tw> to download the latest BIOS for your motherboard.
  - (2) Unzip the BIOS package & you will get BIOS ROM file & flash utilities as follows (take H67H2-M as an example).

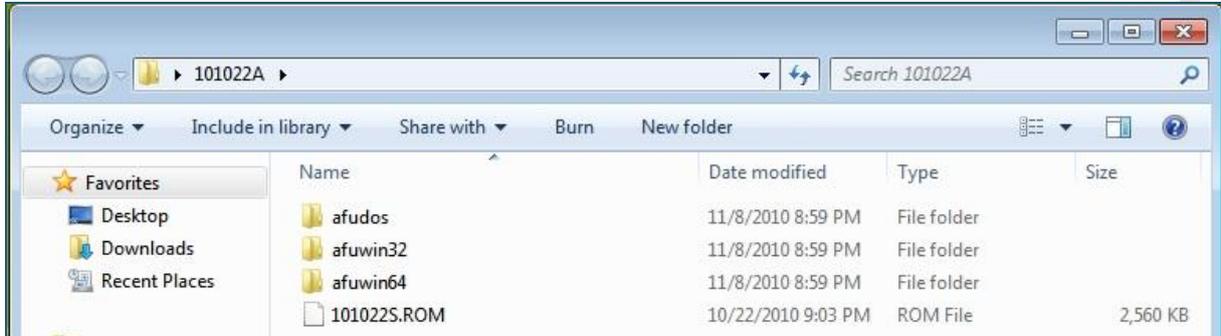


- (3) Open the corresponding “afuwin” file according to your operation system. For example, if you are running Win 7 Ultimate/64-bit, you must open the file “afuwin64” like below to find the correct flash tool to update BIOS under OS.

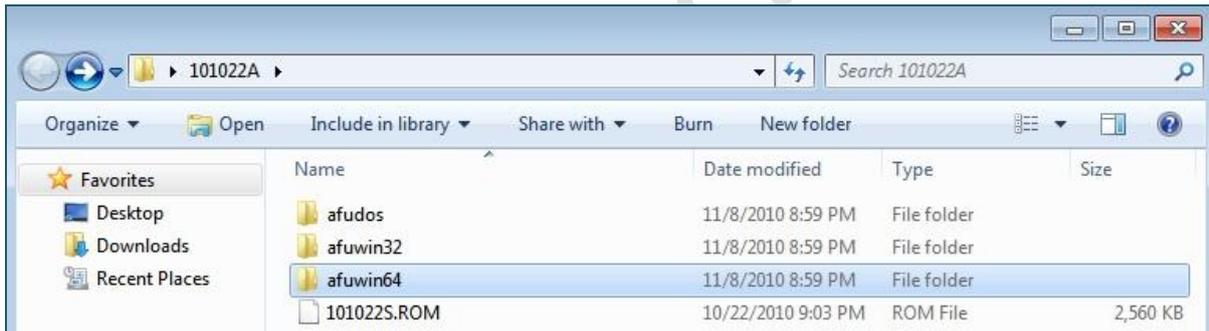

2. Execute AFUWINGUIP to update BIOS.


- (1) Under Windows Vista or Windows 7, please hit “Run as administrator” like below.
- (2) Under Windows XP, you can just double-click the “afuwinguiP.exe” to execute it.

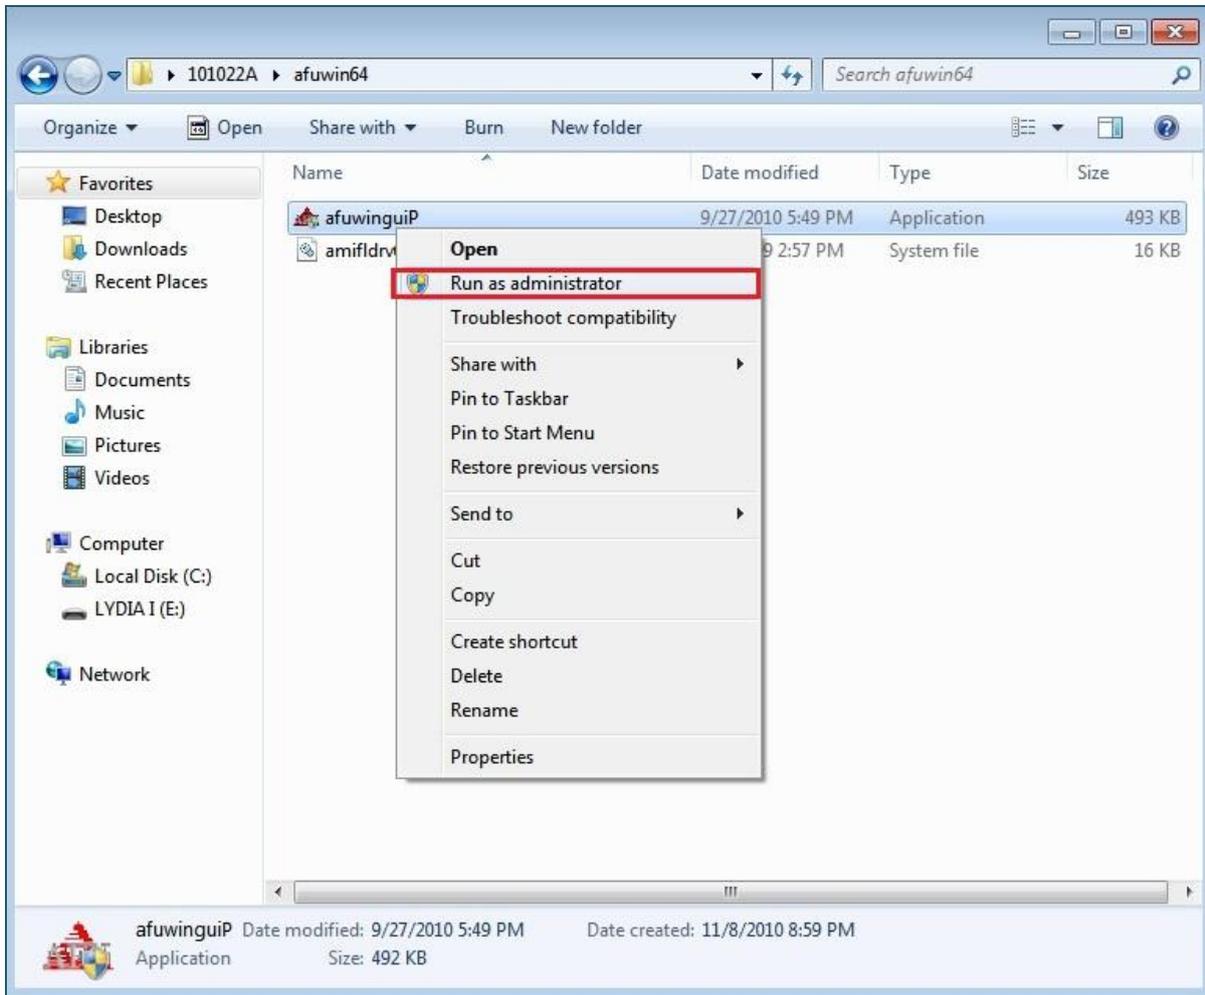


- (3) The following message will pop up, please close the other programs which are running now & press [OK] to continue.




- (4) When below window comes up, please hit [Open].

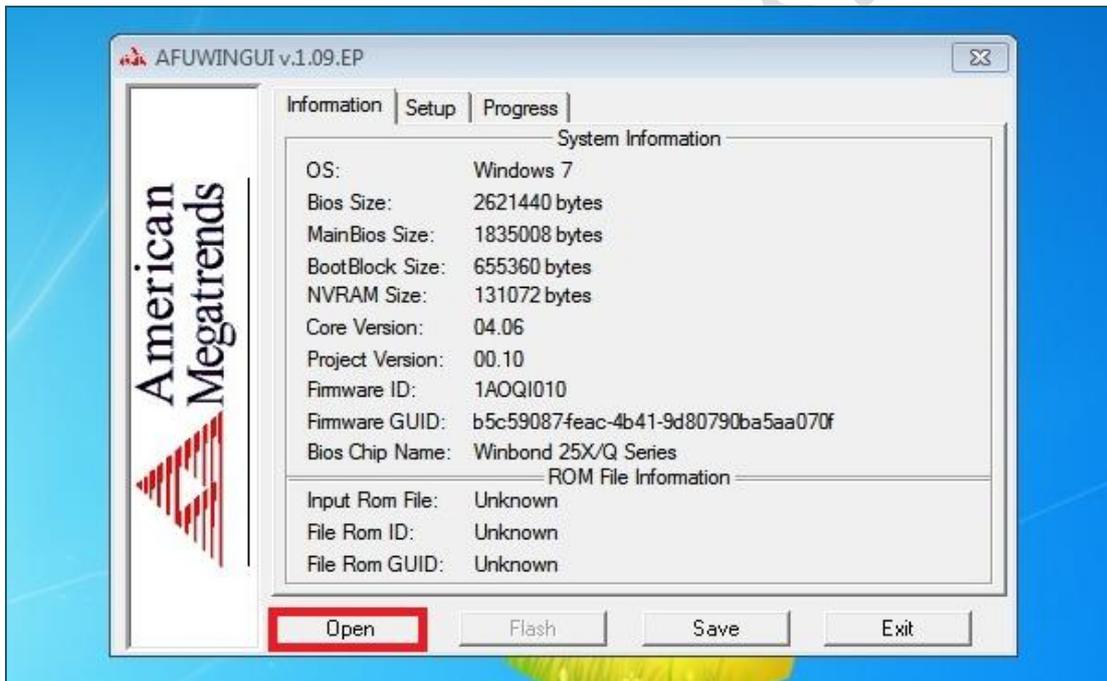

(5) Select the BIOS ROM file from the BIOS package you just unzipped & press [Open].

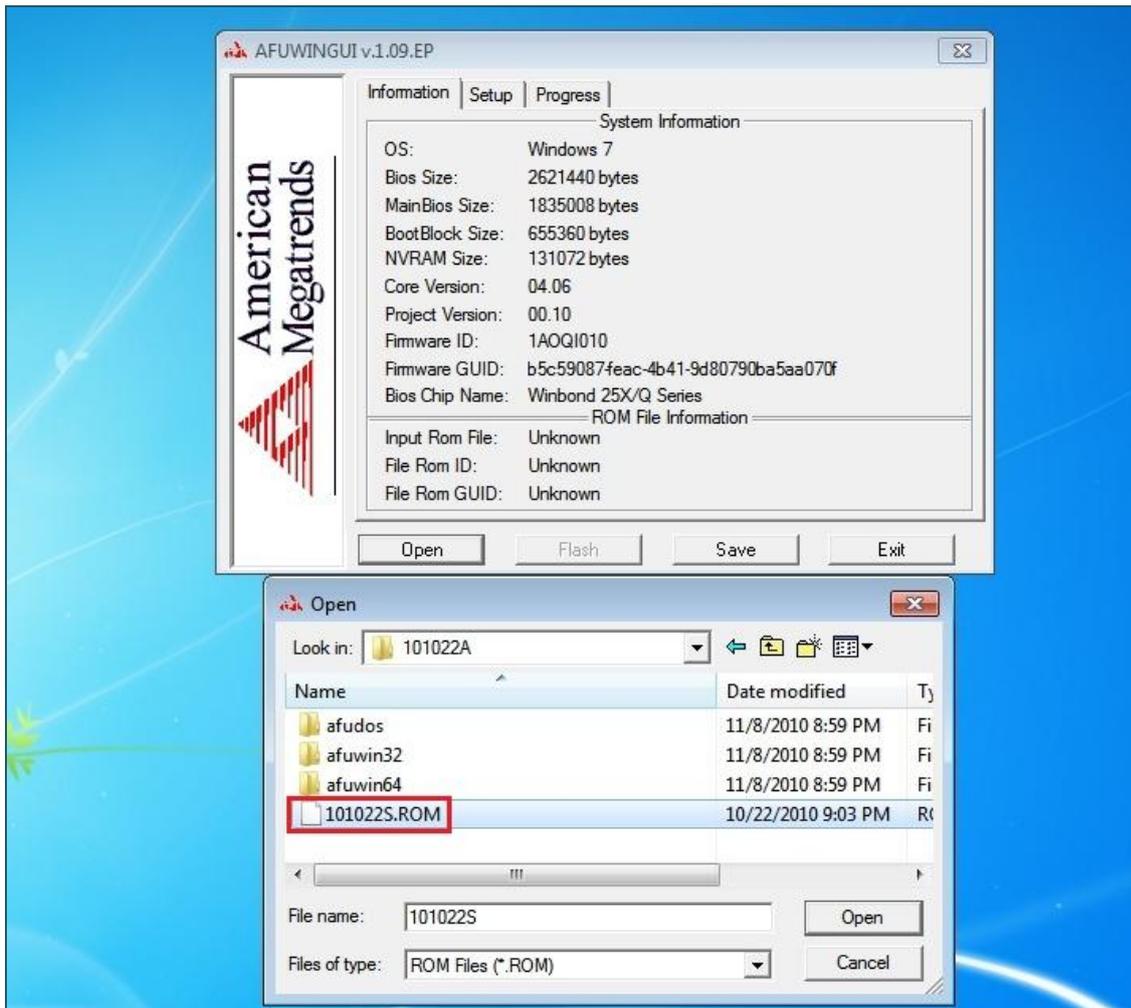

(6) Hit [Flash] & it will start updating BIOS. Once it's done, system will reset automatically & that means the flash process has completed. You can continue to run your system like before.

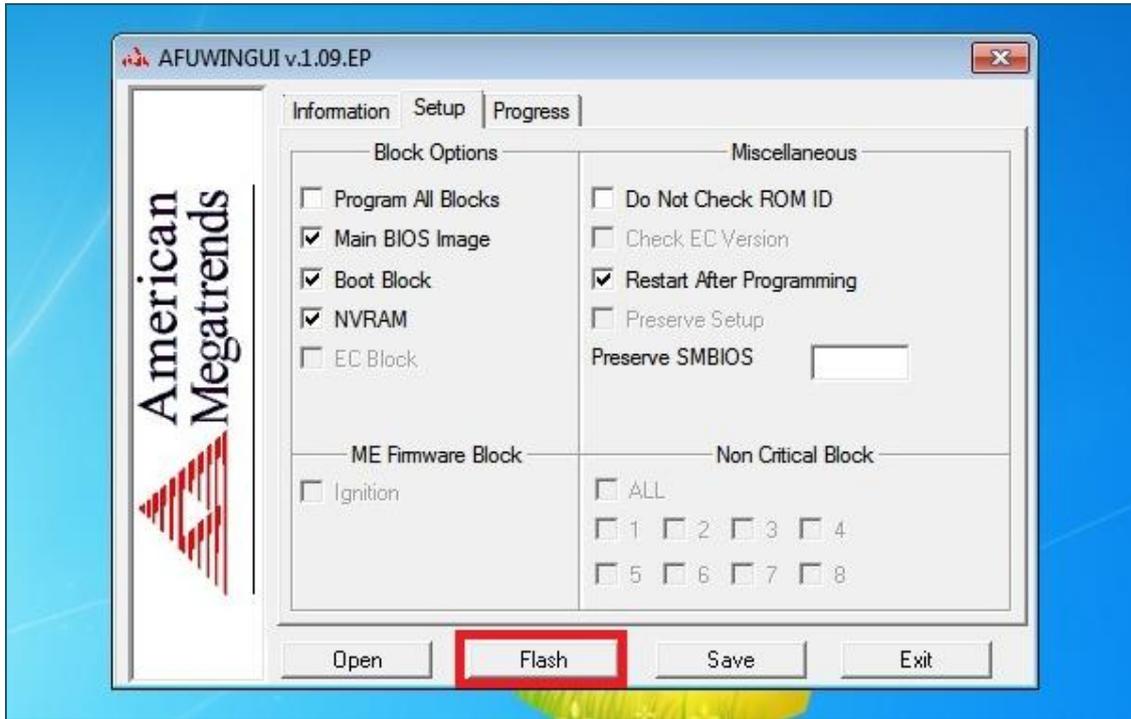

**Beware! Do NOT shut down or reset your system during BIOS flashing. Otherwise, the system may be crashed!**